


M1010 / ZENSEE

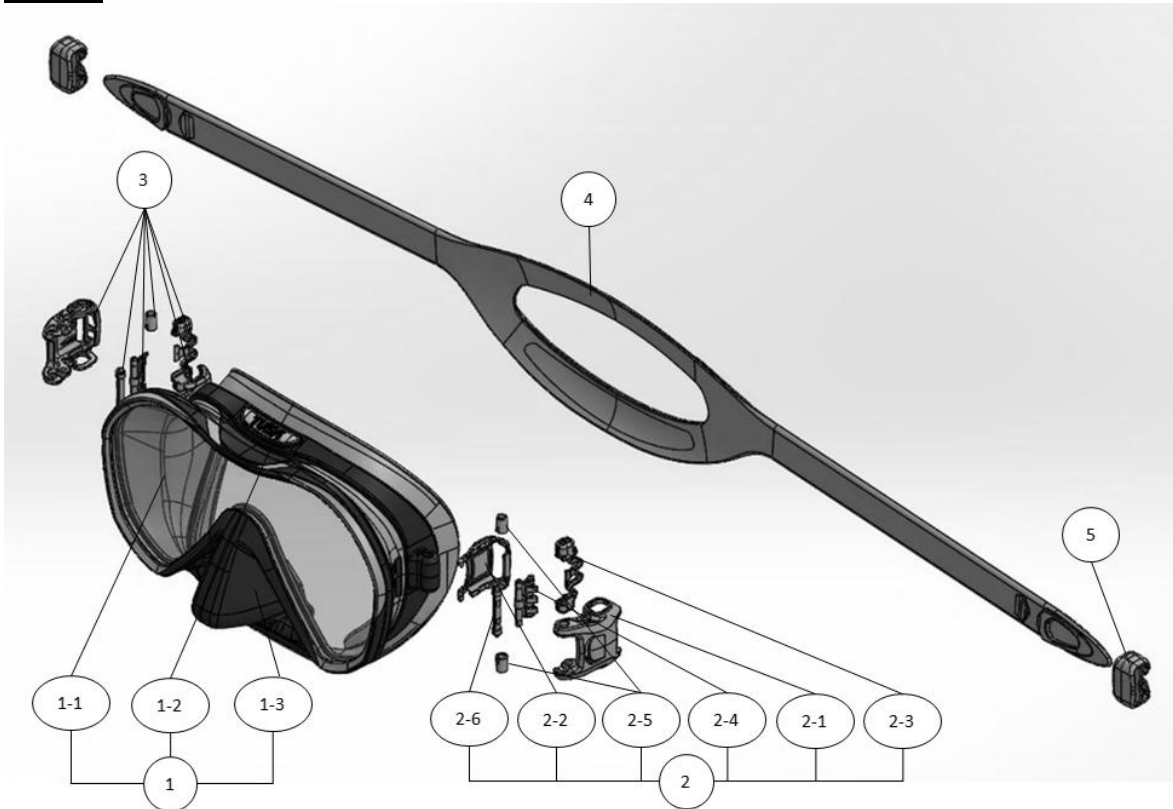

Model	Item No.	Description	Part No.
M1010	1	LENS SKIRT ASSY,	M1010-011
M1010	1-1	LENS	M1010-020
M1010	1-2	WAPPEN	M1010-031
M1010	1-3	SKIRT	M1010-040
M1010	2	ADJUSTER ASSY / L	MU341L
M1010	2-1	ADJUSTER OUTER / L	MU341-010L
M1010	2-2	ADJUSTER INNER	MU341-020
M1010	2-3	ADJUSTER BUTTON	MU341-030
M1010	2-4	ADJUSTER HOOK	MU341-040
M1010	2-5	ADJUSTER PIPE	MU341-050
M1010	2-6	ADJUSTER PIN	MU341-060
M1010	3	ADJUSTER ASSY / R	MU341R
M1010	3-1	ADJUSTER OUTER / R	MU341-010R
M1010	3-2	ADJUSTER INNER	MU341-020
M1010	3-3	ADJUSTER BUTTON	MU341-030
M1010	3-4	ADJUSTER HOOK	MU341-040
M1010	3-5	ADJUSTER PIPE	MU341-050
M1010	3-6	ADJUSTER PIN	MU341-060
M1010	4	STRAP	M2004-060
M1010	5	STRAP TIE	M2004-070